
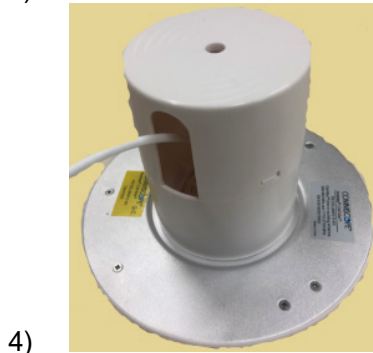
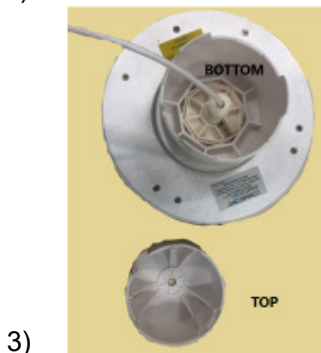
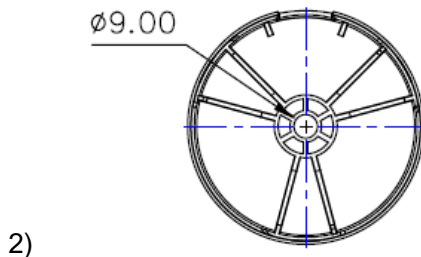


INSTALLATION INSTRUCTION FOR HARD CEILING MOUNTING KIT (7705125)

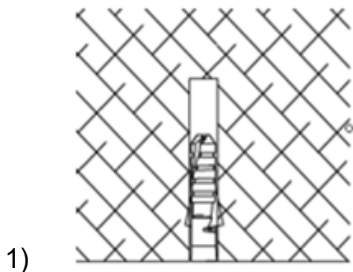

Installation Steps

- 1) Drill a hole in the ceiling and use the correct anchor for the ceiling material. The hole in the mount is 9 mm / 0.354", so be sure to use an anchor that will pass through the mounting hole.
- 2) Screw the upper part to the ceiling with anchor, nut and washer, observing the cable outlet direction.
- 3) Attach the bottom half of the mount to the antenna using the nut that is supplied with the antenna.
- 4) Snap in the antenna and bottom part assembly as shown. Observe the bending radius of the antenna cables.

Version	Changes	Release Date
M0149AWA		11-March-2020
M0149AWB	- Rebranding and contact data updated	22-April-2026

Online Support

Scan the QR code to submit tickets:



Copyright © 2026 ANDREW®, an Amphenol company. All Rights Reserved.

Amphenol and ANDREW are registered trademarks of Amphenol and/or its affiliates in the U.S. and other countries. All product names, trademarks and registered trademarks are property of their respective owners.

Andrew Wireless Systems GmbH, 22-April-2026