
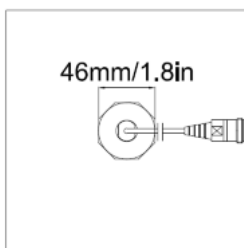


INSTALLATION INSTRUCTION FOR CELLMAX-O-43-WI

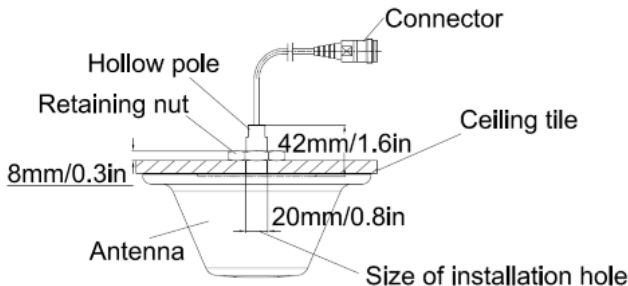

Installation Steps

- 1) Cut a hole in the ceiling tile with the diameter shown above.
- 2) Remove the retaining nut from the back of the antenna (labelled "Retaining nut" in the diagram above).
- 3) Feed the pigtail of the antenna through the hole in the ceiling tile.
- 4) Reinstall the retaining nut so that it is snug against the ceiling tile.

Notes:

- The cable bending radius must not be less than 40 mm.
- For massive/hard ceilings, use Hard Ceiling Mounting Kit 7705125 which serves to guide the jumper to the side. For this kit, a separate instruction (M0149AWx) is available:

Version	Changes	Release Date
M0153A0B		13-October-2020
M0153A0C	- Rebranding and contact data updated; editorial update, and obsolete versions deleted	28-April-2026

Online Support

Scan the QR code to submit tickets:



Copyright © 2026 ANDREW®, an Amphenol company. All Rights Reserved.

Amphenol and ANDREW are registered trademarks of Amphenol and/or its affiliates in the U.S. and other countries. All product names, trademarks and registered trademarks are property of their respective owners.

Andrew Wireless Systems GmbH, 28-April-2026