

D

C

B




A

D


C

B

A

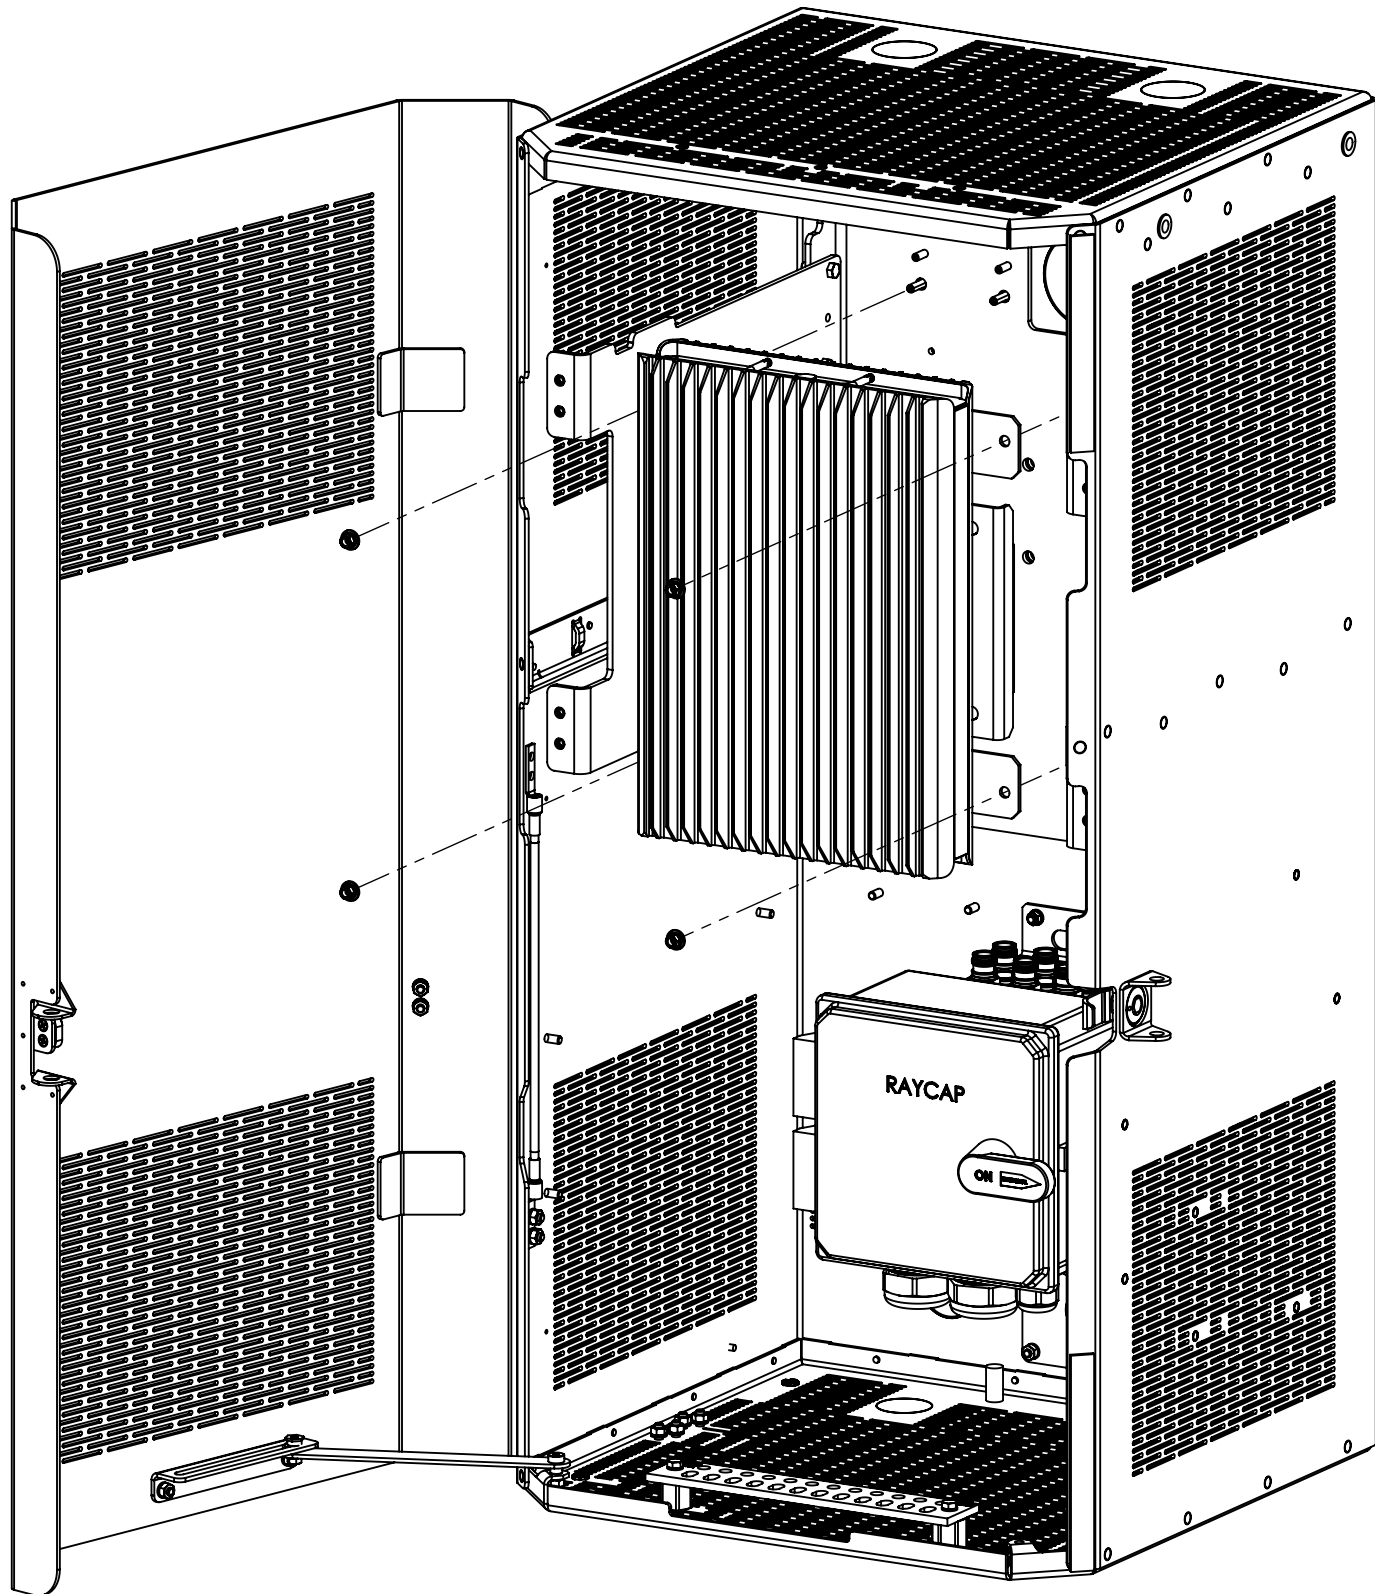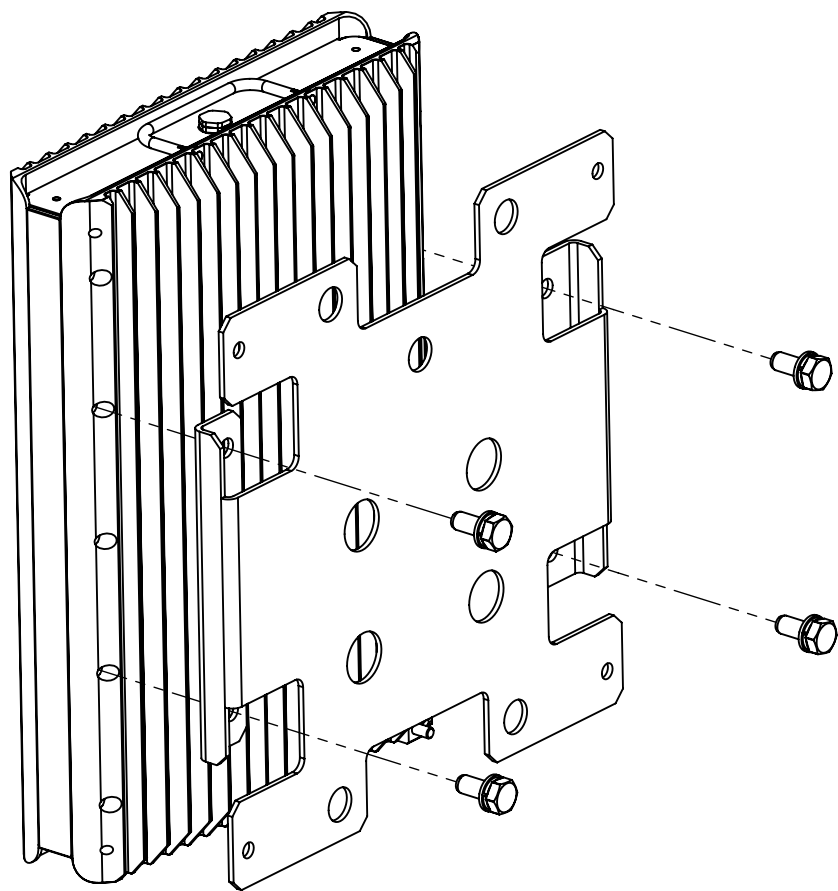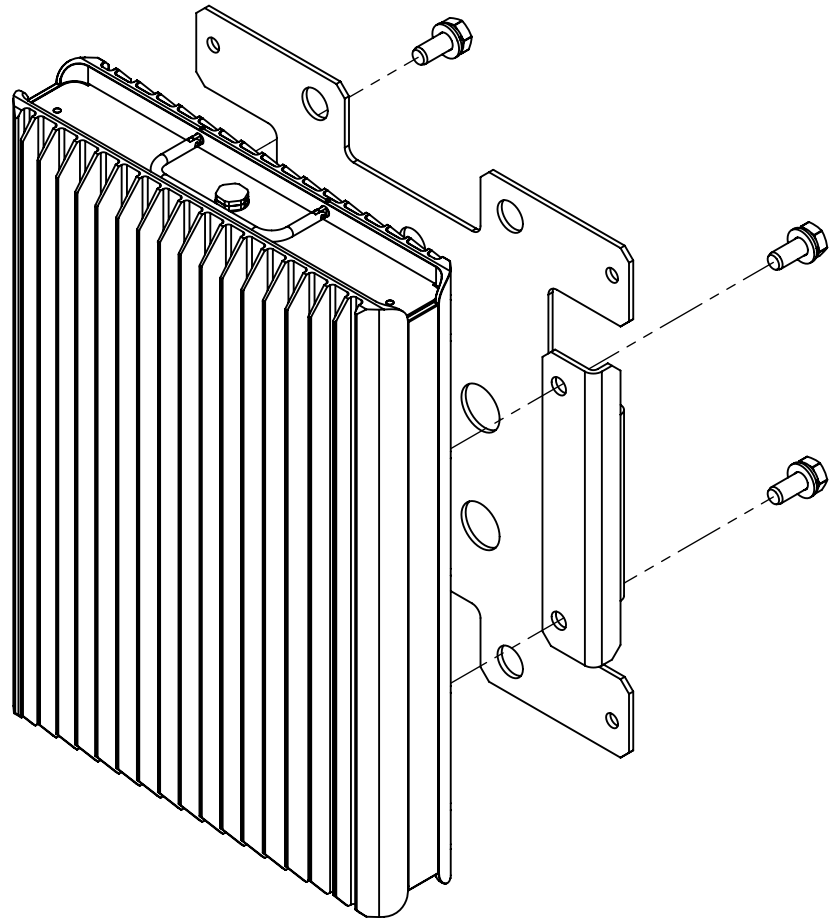

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	JP1130 16MAR20	GR1010 8000039943
B	UPDATED VIEWS FOR NEW RADIO AND RECTIFIER CONFIGURATIONS	JP1130 10DEC20	GR1010 8000044064

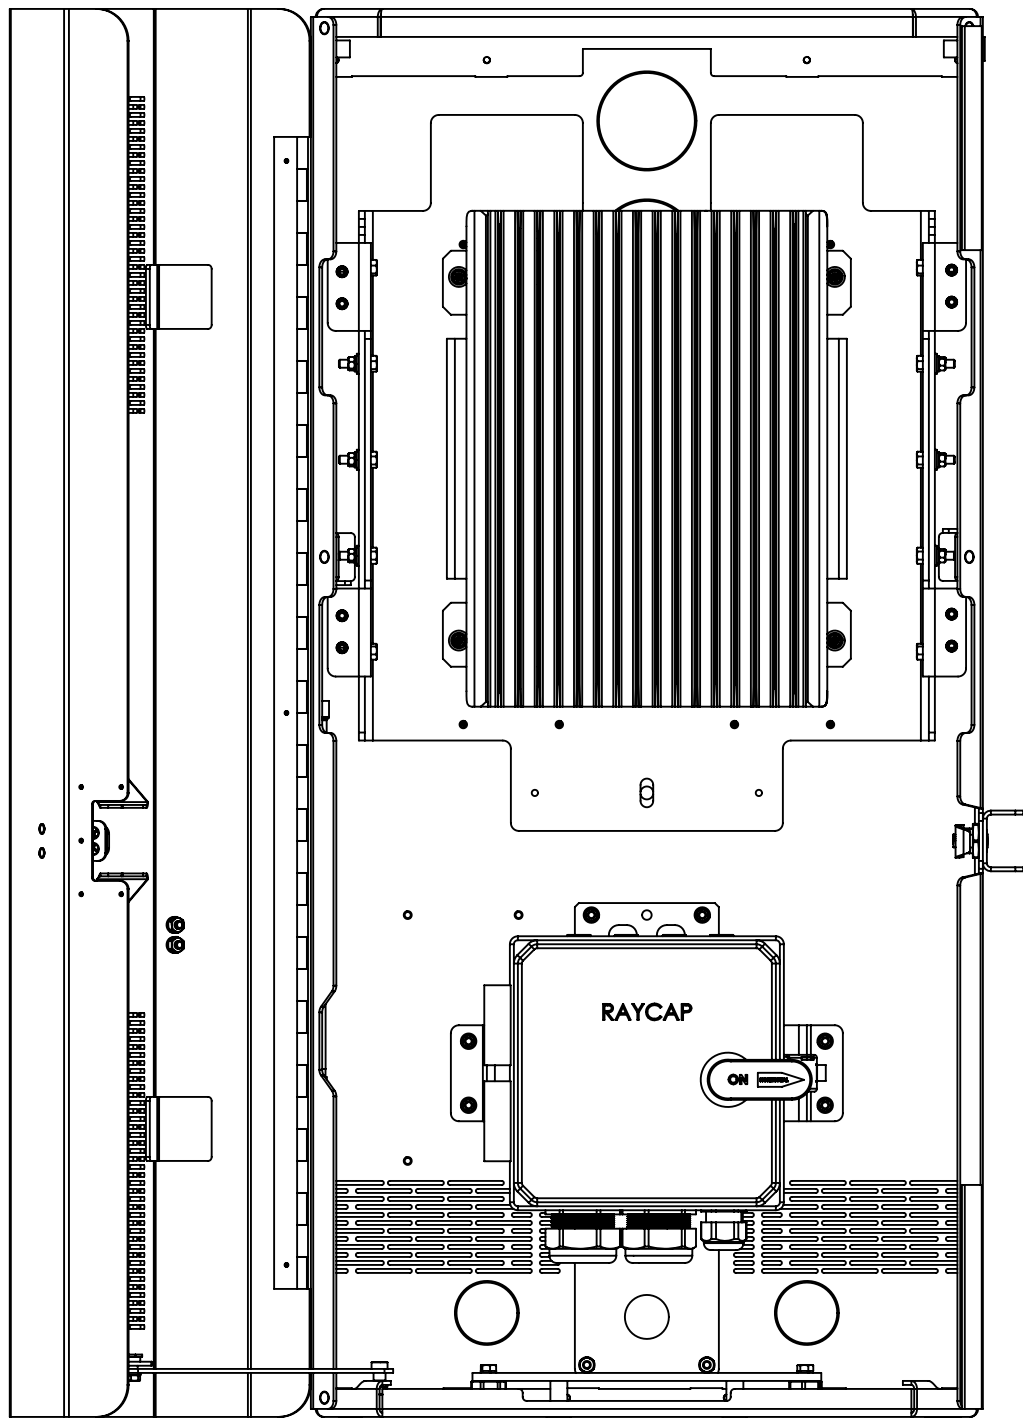

DELTA RECTIFIER INSTALLATION

- 1) INSTALL THE RECTIFIER TO THE BRACKET USING 4 SETS OF M10 HW, PROVIDED IN THE HW KIT
- 2) INSTALL THE RECTIFIER SUB-ASSEMBLY TO THE ENCLOSURE USING 4 SETS OF 1/4" NUTS, LOCK AND FLAT WASHERS

DENSITY	lbs/in³
MASS	lbs
VOLUME	in³
SURFACE AREA	in²
HEIGHT	
LENGTH	
WIDTH	

Confidential

**ANDREW**® an Amphenol company

TOLERANCES		SAP MATERIAL MASTER						
1 PLACE .X[X] ± 0.2[6.3]	3 PLACE .XXX[X] ± 0.060[1.5]	760237600S1INSTALL						
2 PLACE .XX[X] ± 0.12[3.0]	ANGLES ± 2°							
FINISH		MATERIAL						
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES INTERPRET PER ANSI Y 14.5M-1994		NAME	DATE	760237600S1 INSTALL				
		CE JP1130	03/16/2020					
		RW MS1288	05/21/2025					
		AD DM1121	05/21/2025					
		RE DM1121	05/21/2025					
ECN 008000044064		SCALE 1:4		DOCUMENT NO. 760237600S1 INSTALL				
SIZE	Auth Group	INSL	MODEL		DRAWING		SHEET 1 OF 4	
C			VERSION	STATUS	REVISION	VERSION		STATUS
			02	RE	C	01	RE	B

D

C

B

A





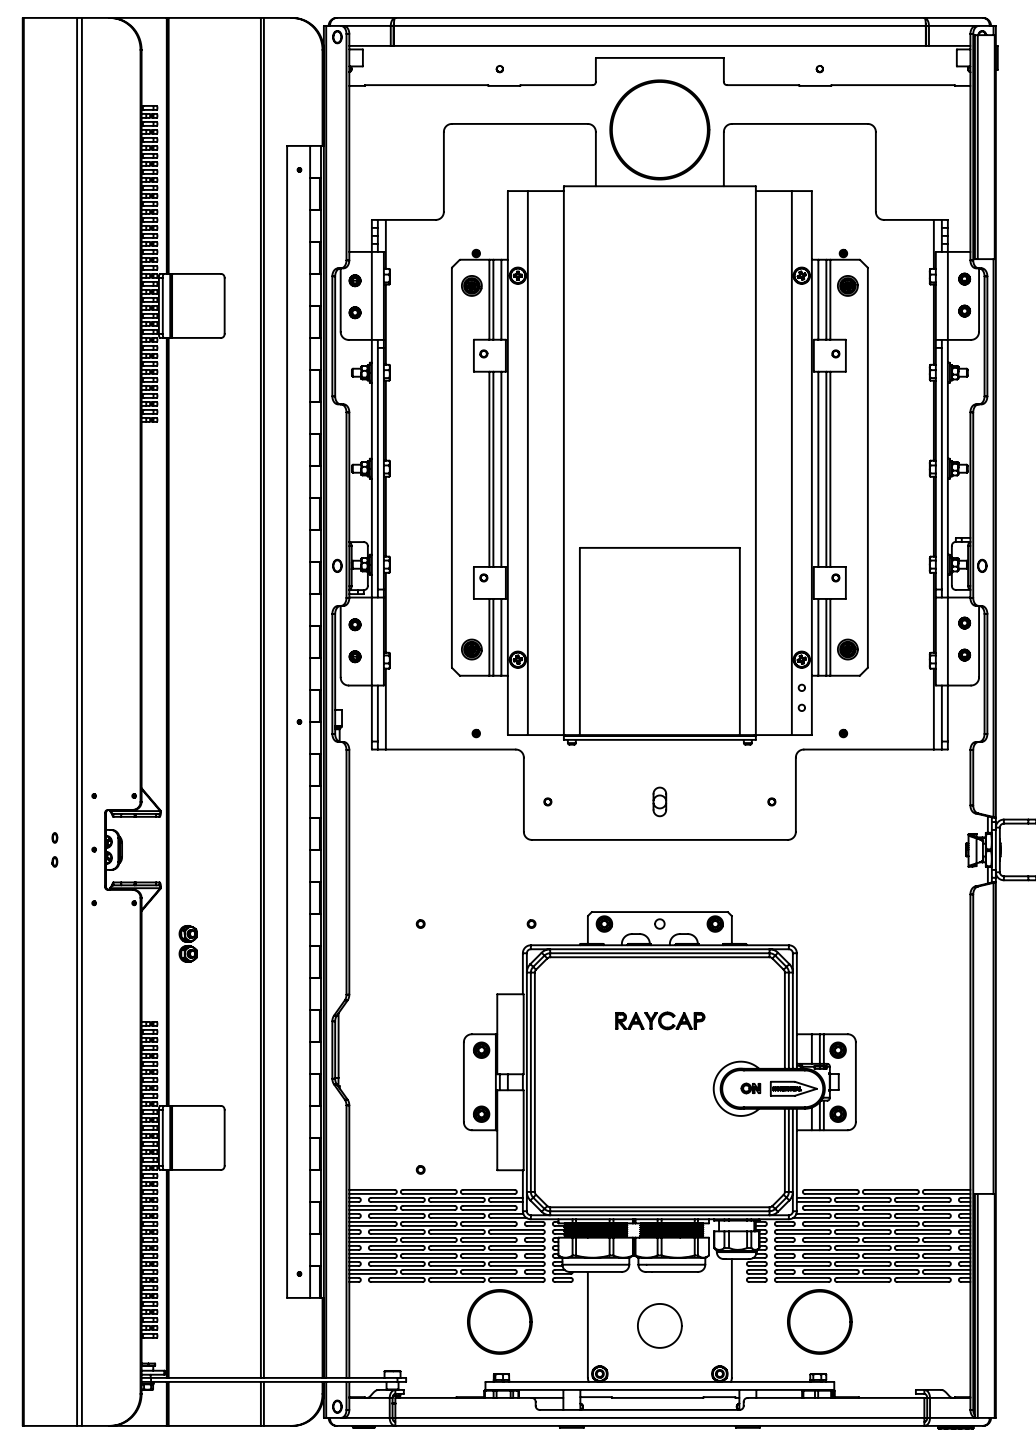


ABB RECTIFIER INSTALLATION

- 1) INSTALL THE RECTIFIER TO THE BRACKET USING 4 SETS OF M6 HW, PROVIDED IN THE HW KIT
- 2) INSTALL THE RECTIFIER SUB-ASSEMBLY TO THE ENCLOSURE USING 4 SETS OF 1/4" NUTS, LOCK AND FLAT WASHERS

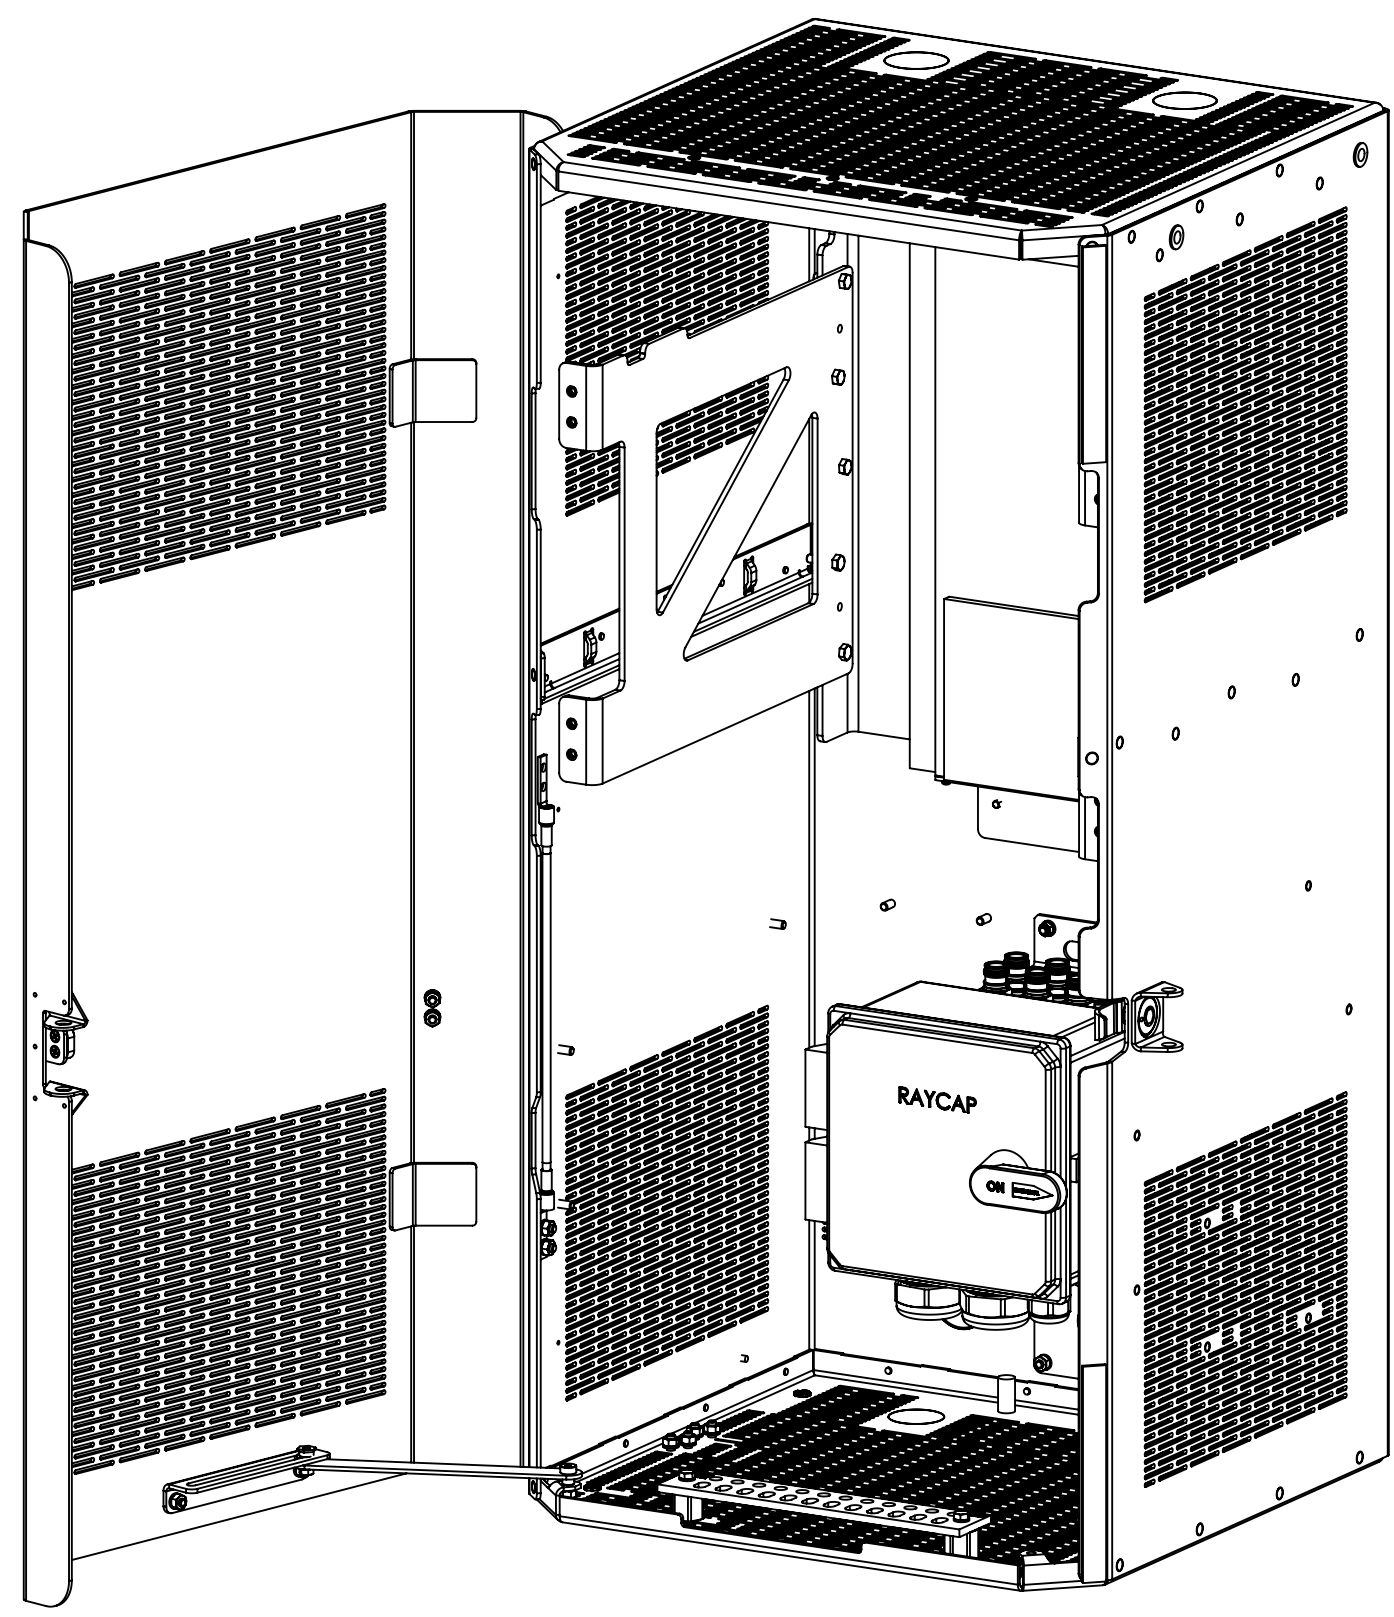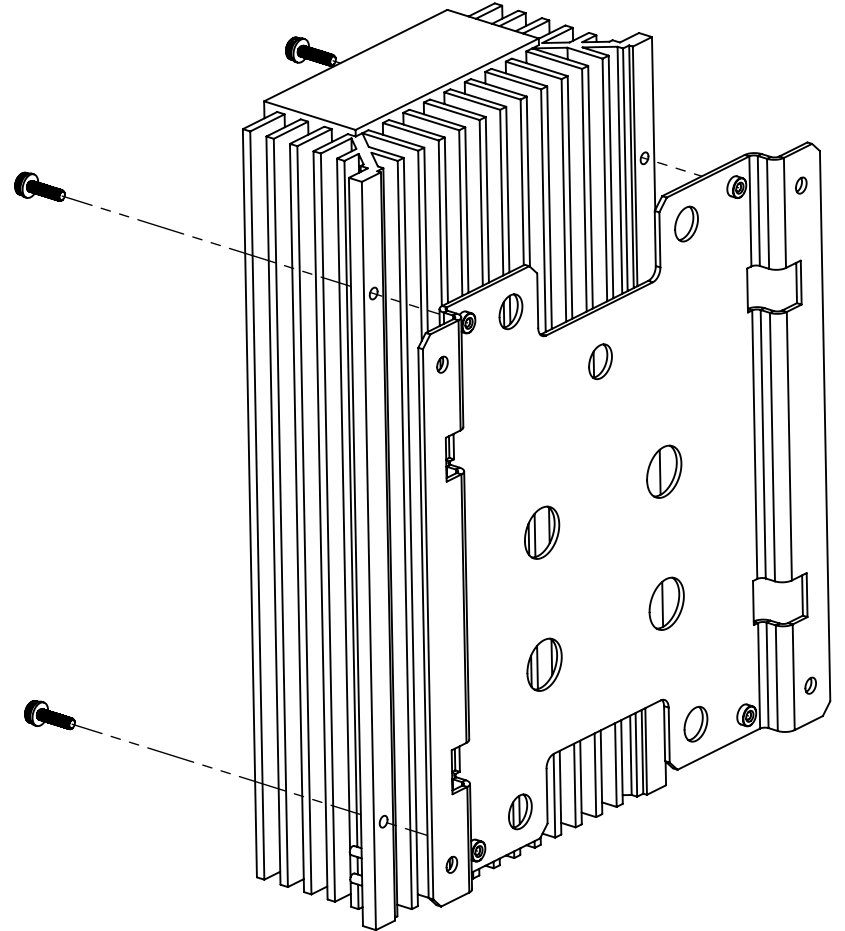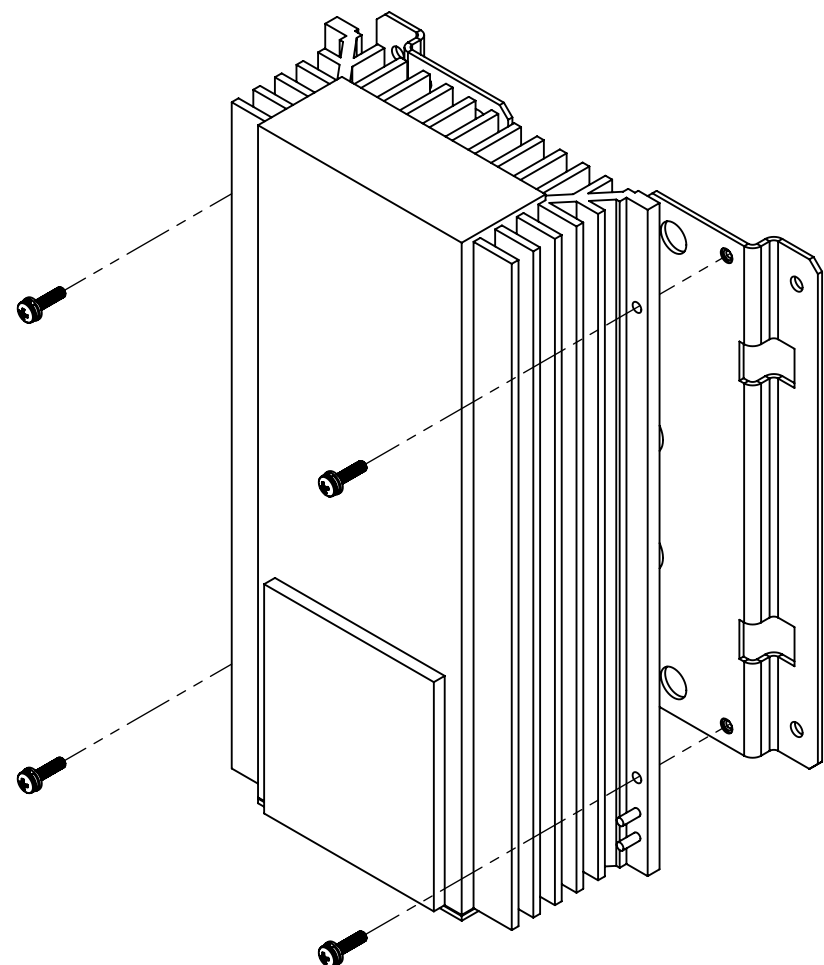

TITLE				
760237600S1 INSTALL				
SIZE	SCALE	DOCUMENT NO.		
C	1:4	760237600S1 INSTALL		
 		DRAWING		
		VERSION	STATUS	REVISION
		01	RE	B
				SHEET 2 OF 4

Confidential

D

C

B

A

4 3 2 1

D

D

C




C

B

B

A

A

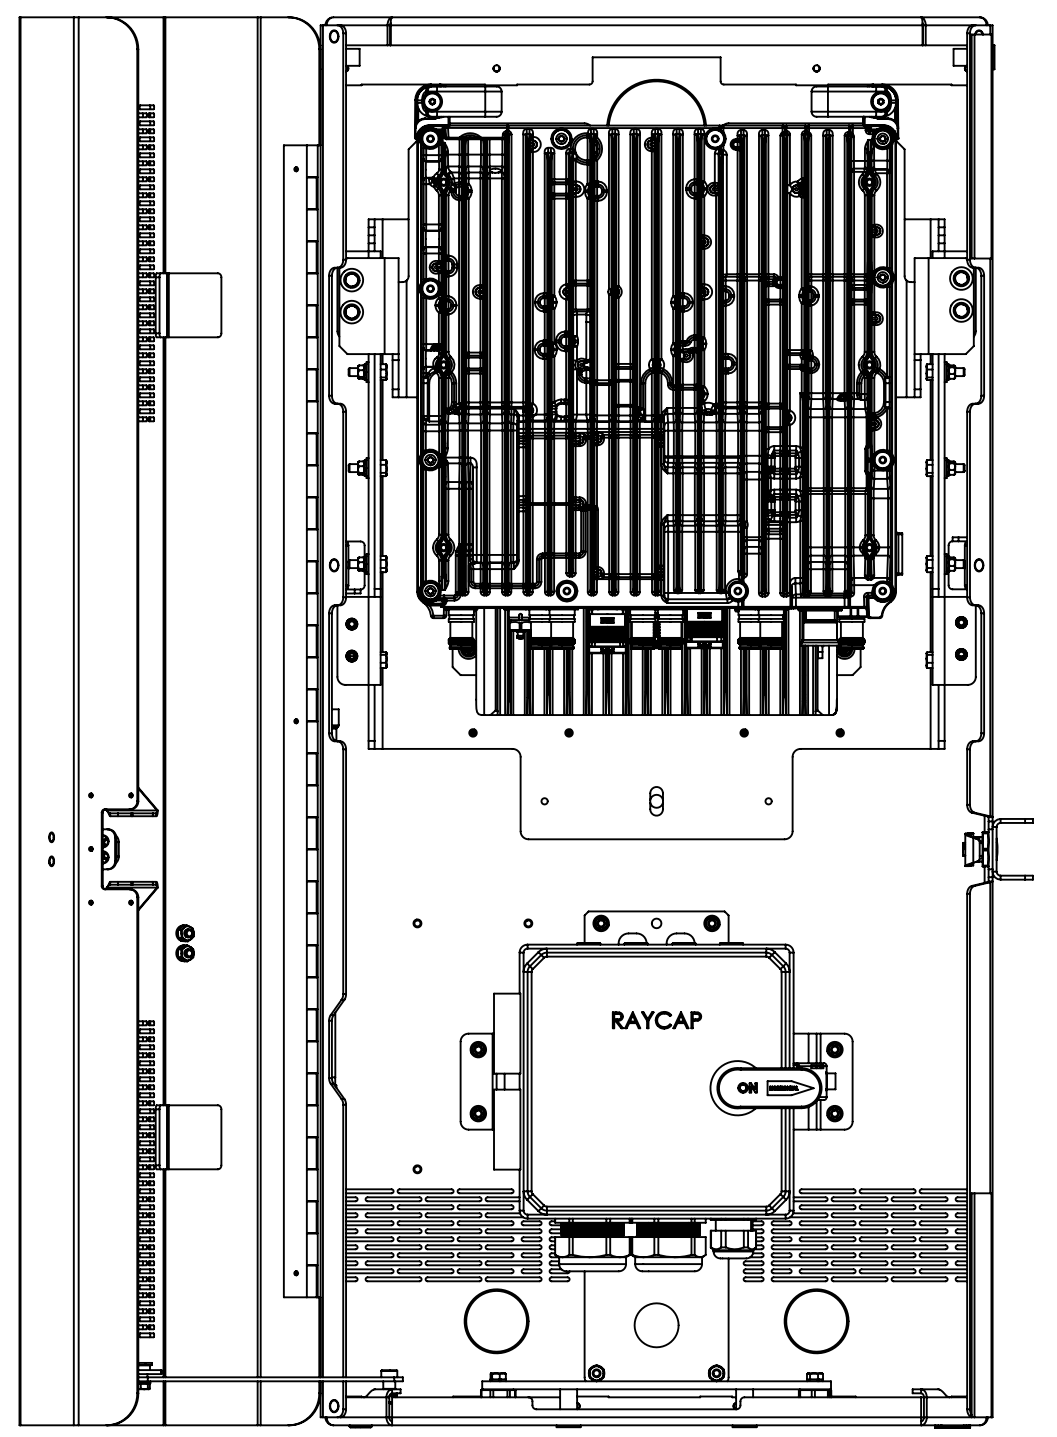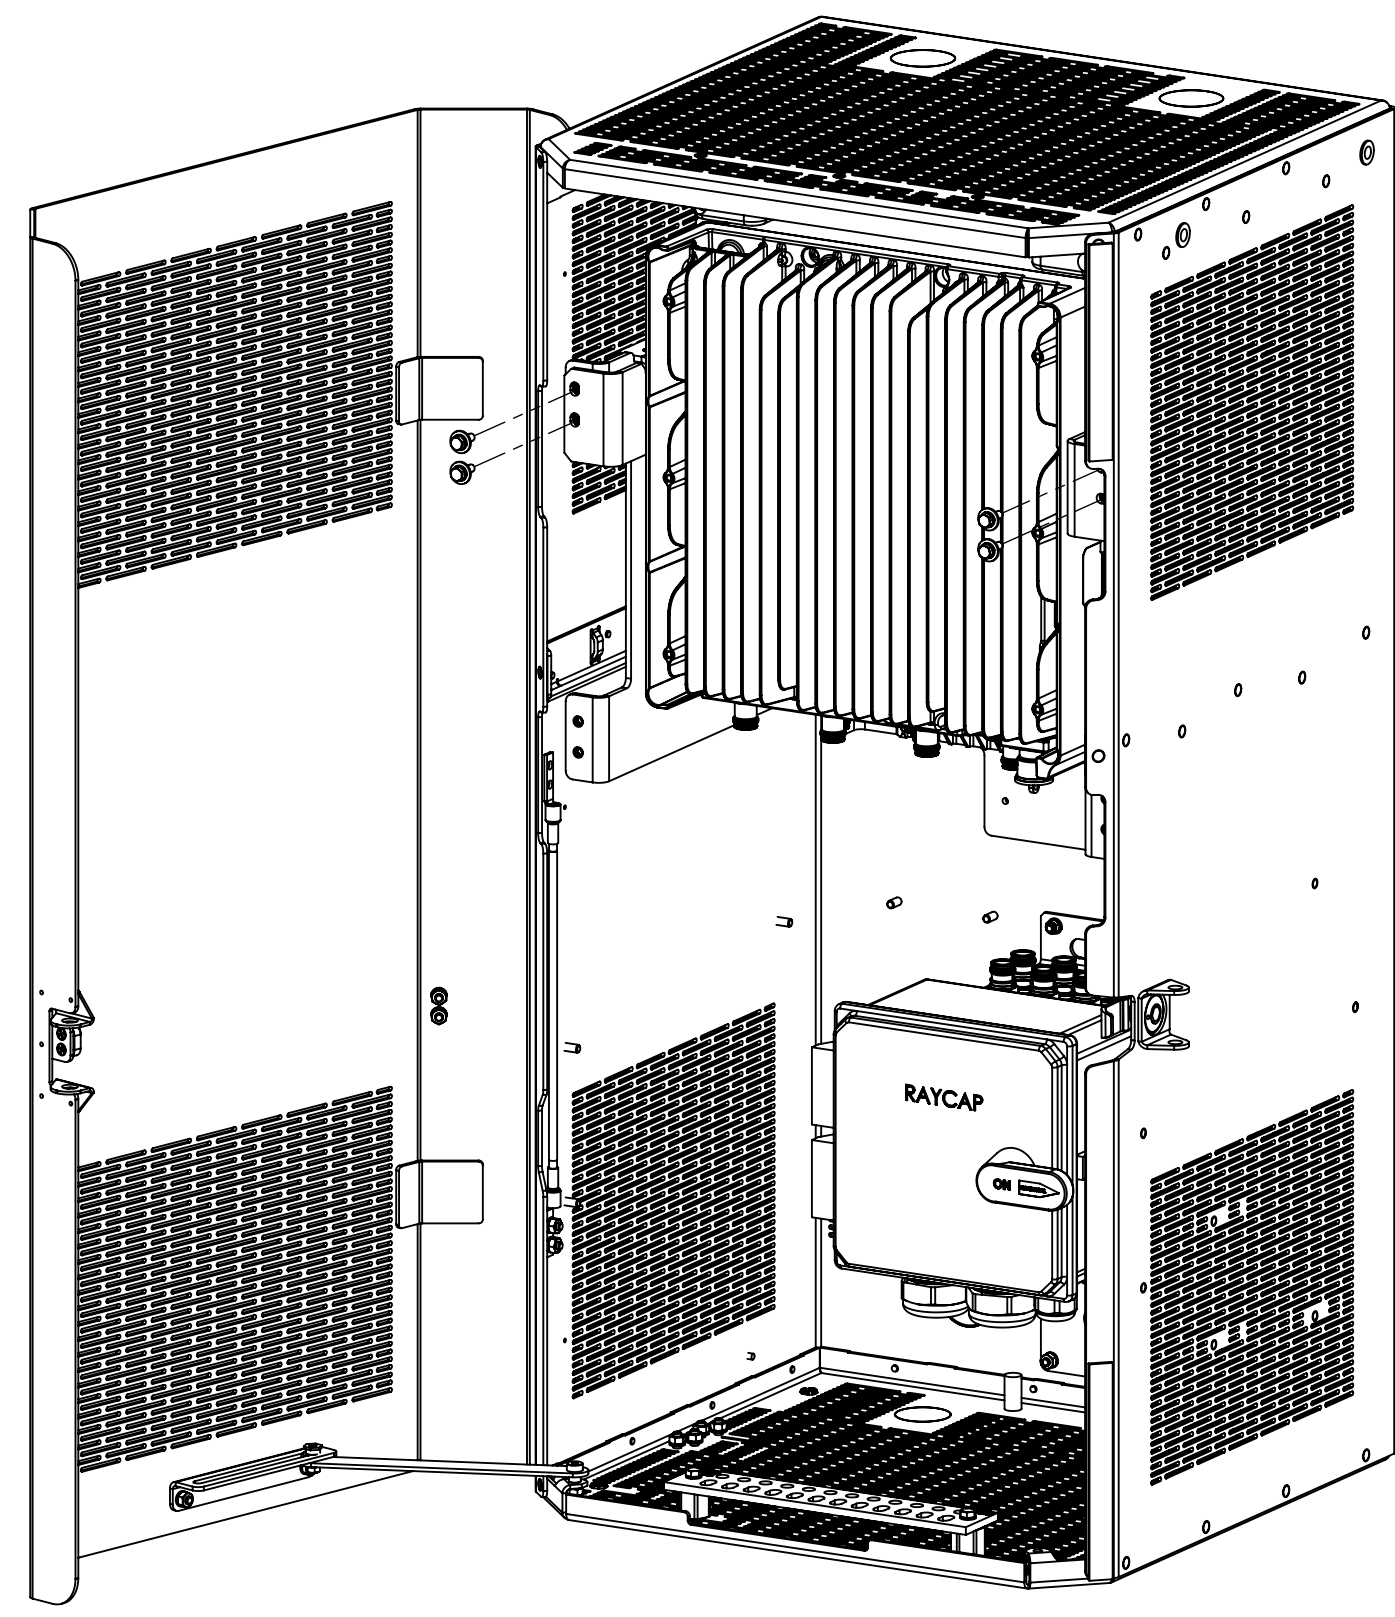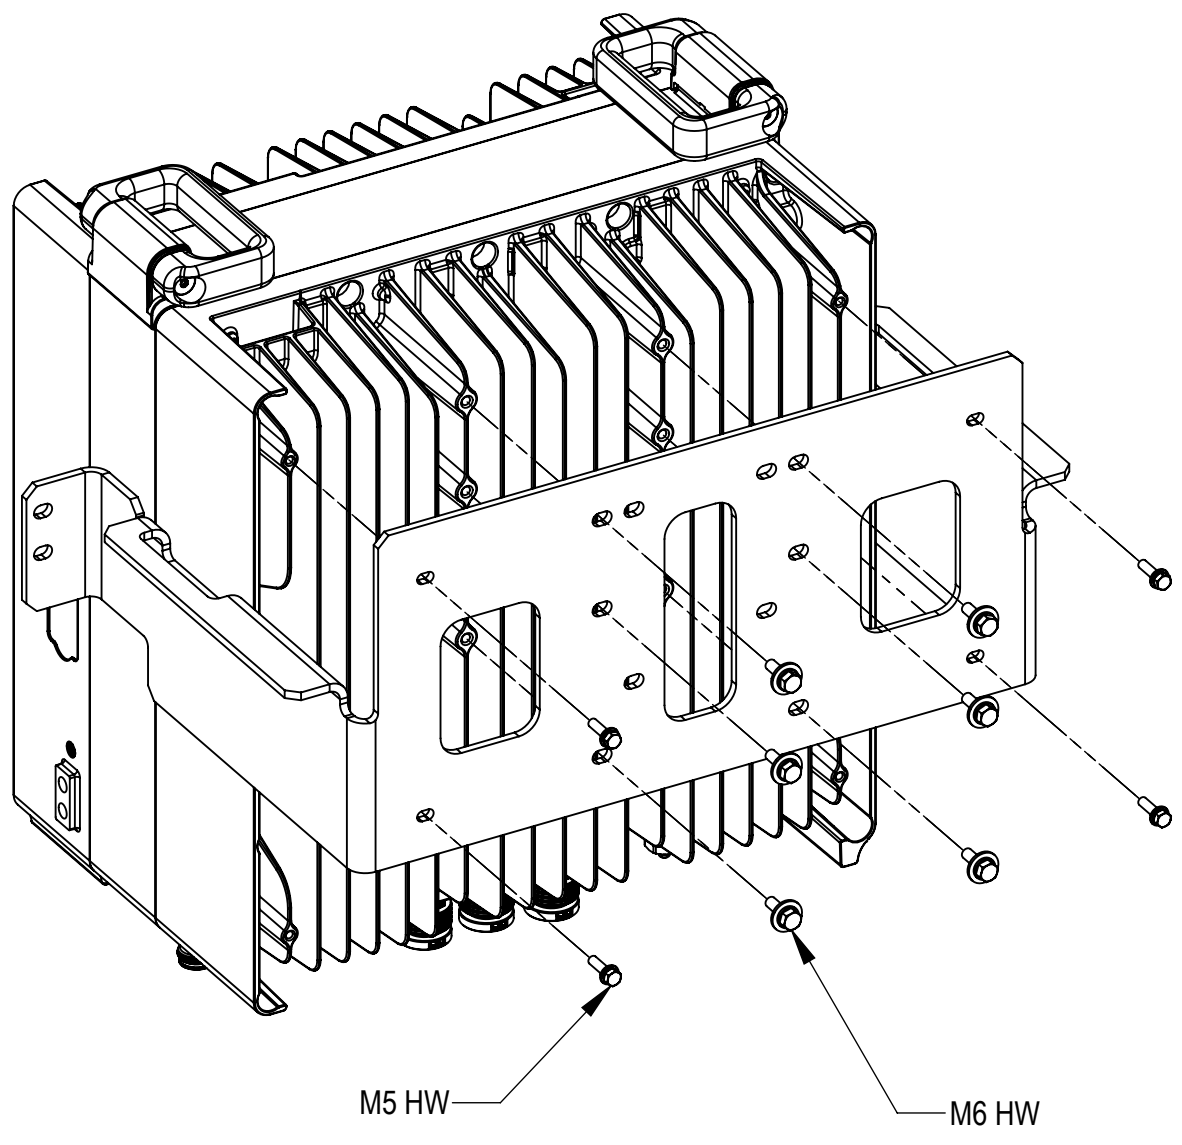


DUALBAND RADIO INSTALLATION

- 1) INSTALL THE DUALBAND RADIO RDV01U OR RF4402 RADIO TO THE BRACKET USING 4 SETS OF M5 HW AND 6 SETS OF M6 HW, PROVIDED IN THE HW KIT
- 2) INSTALL THE DUALBAND RADIO SUB-ASSEMBLY TO THE ENCLOSURE USING 4 SETS OF M6 BOLTS, LOCK AND FLAT WASHERS

*NOTE: ONLY RDV01U RADIO SHOWN HERE FOR ILLUSTRATION.

Confidential

				
TITLE 760237600S1 INSTALL				
SIZE C	SCALE 1:4	DOCUMENT NO. 760237600S1 INSTALL		
 		DRAWING		
		VERSION 01	STATUS RE	REVISION B
				SHEET 3 OF 4




4 3 2 1

D

C

B

A

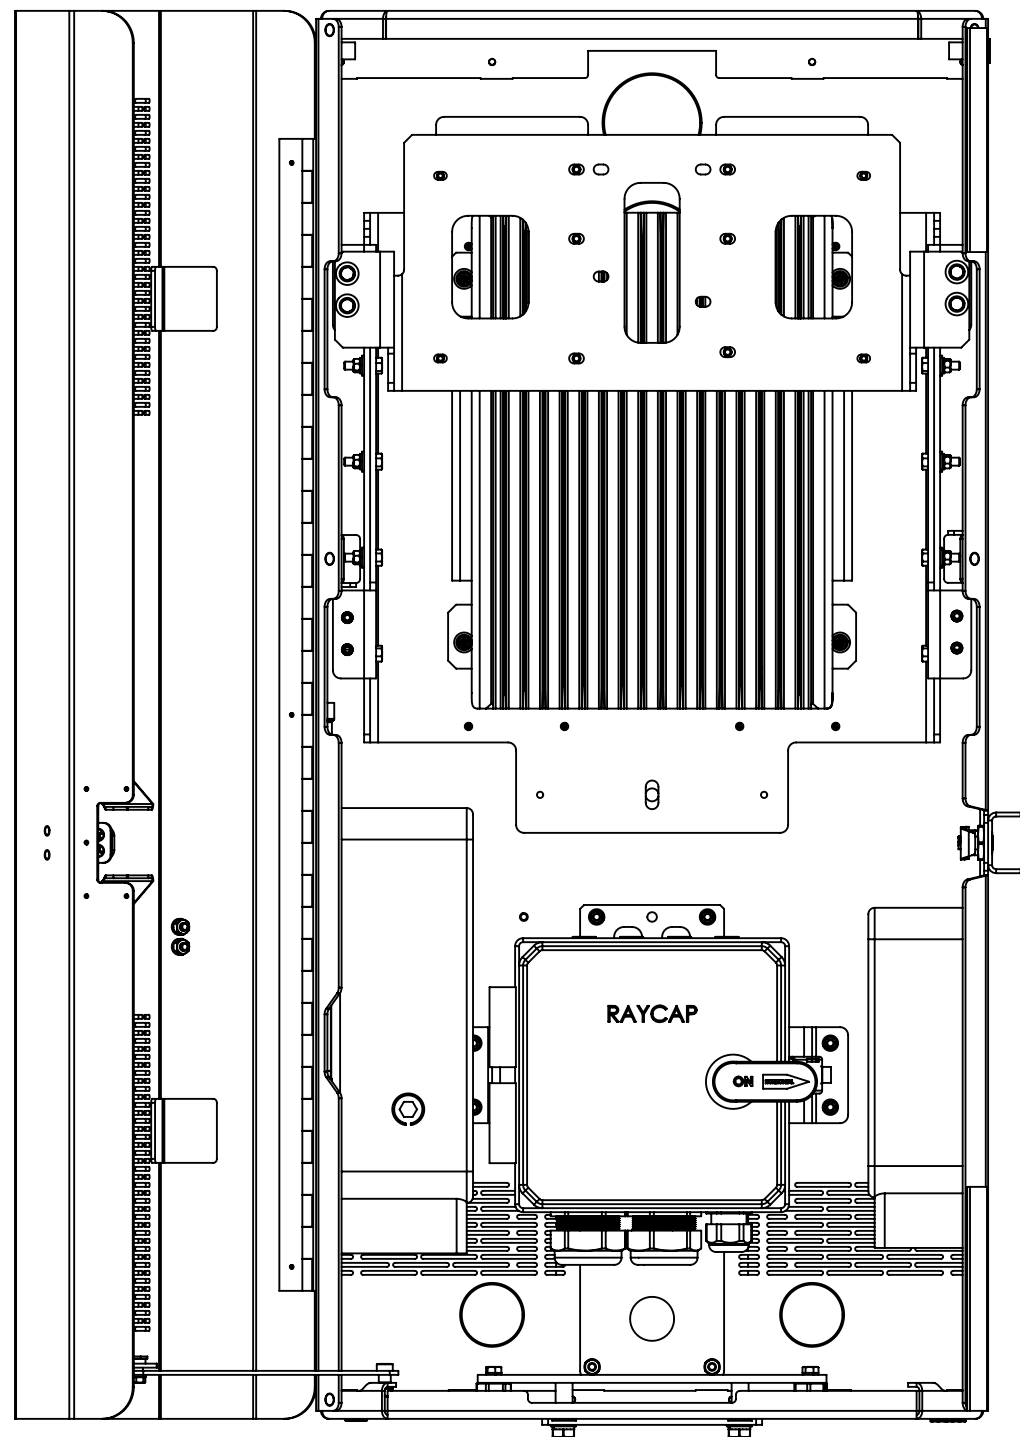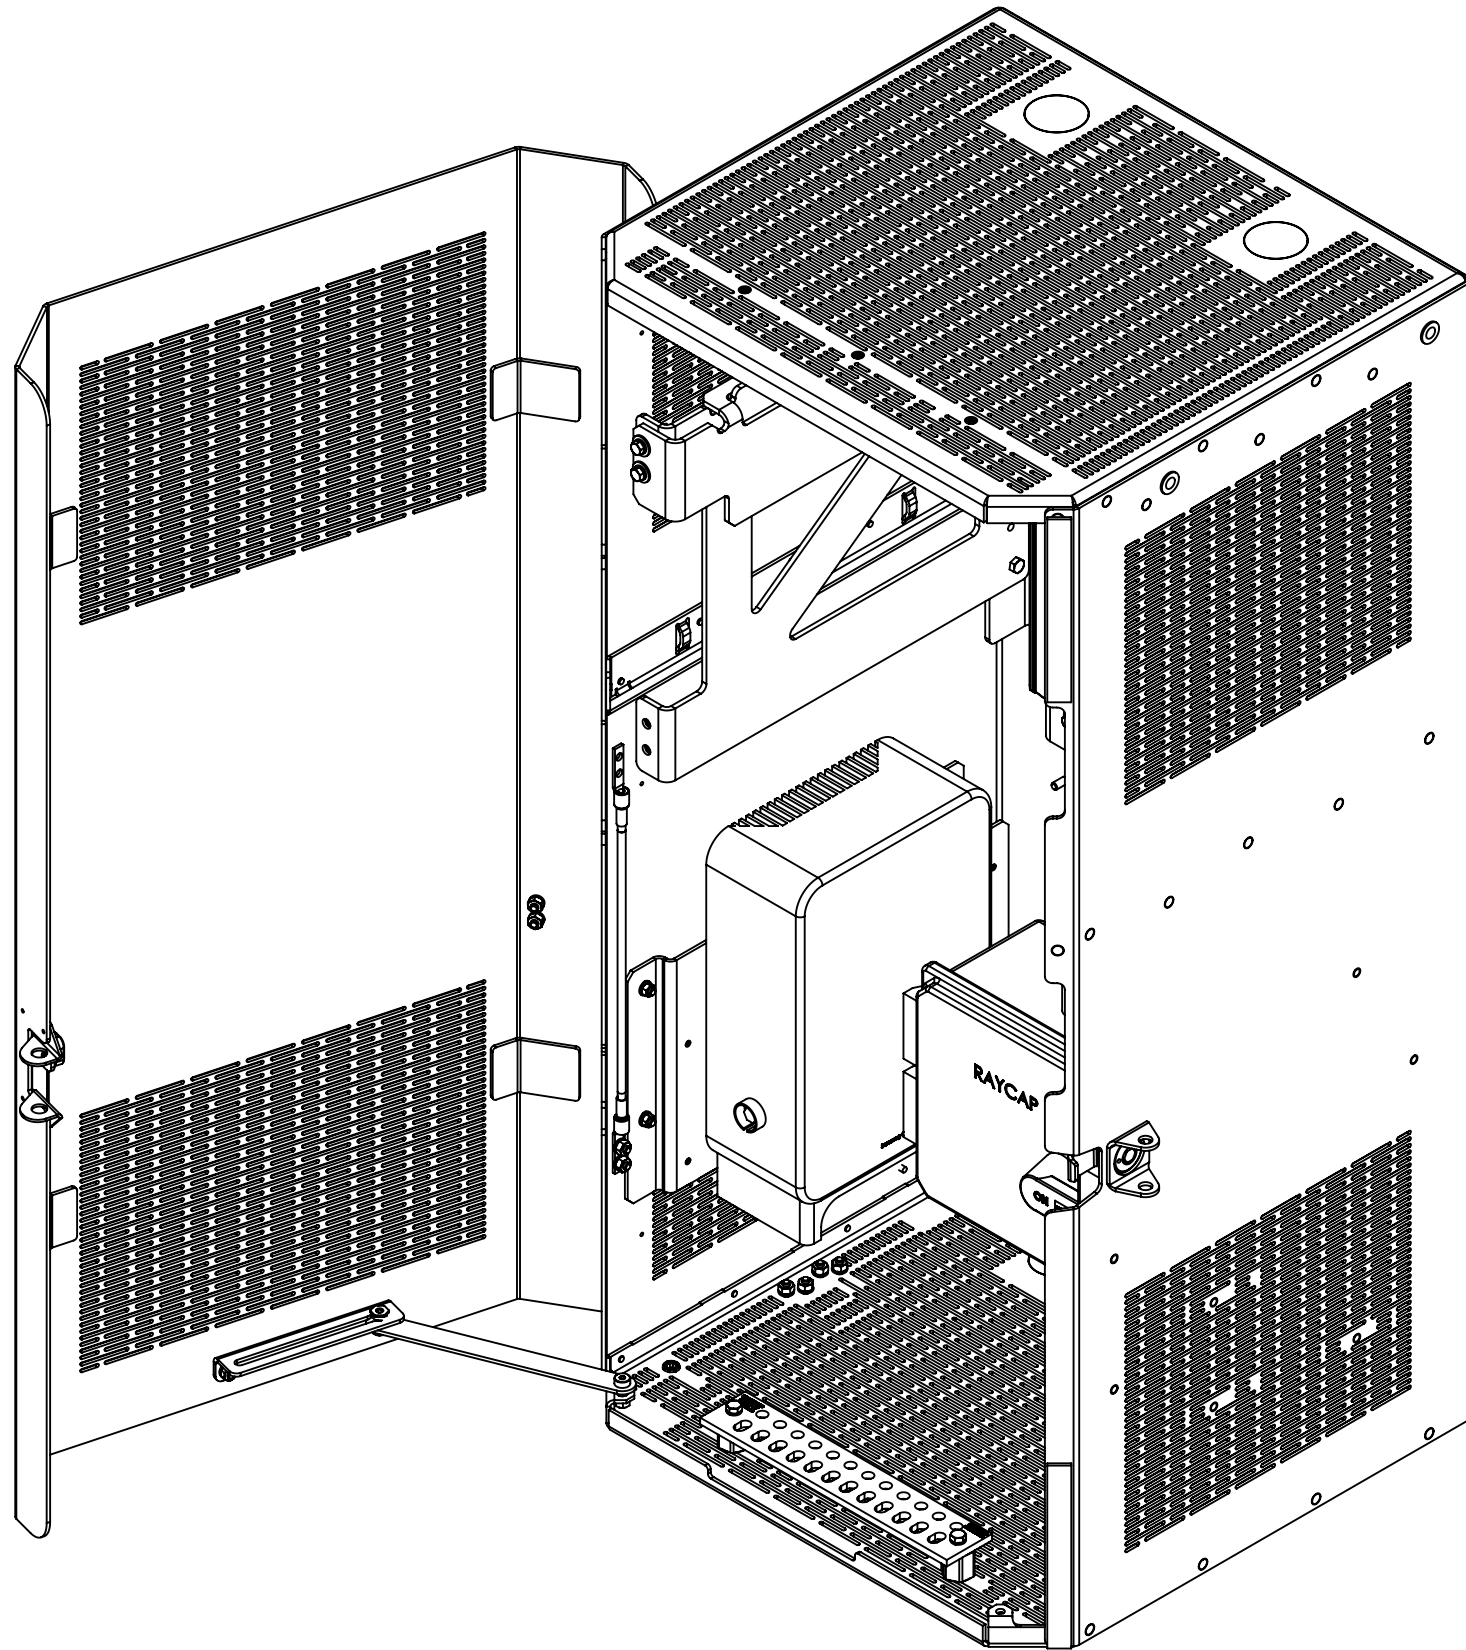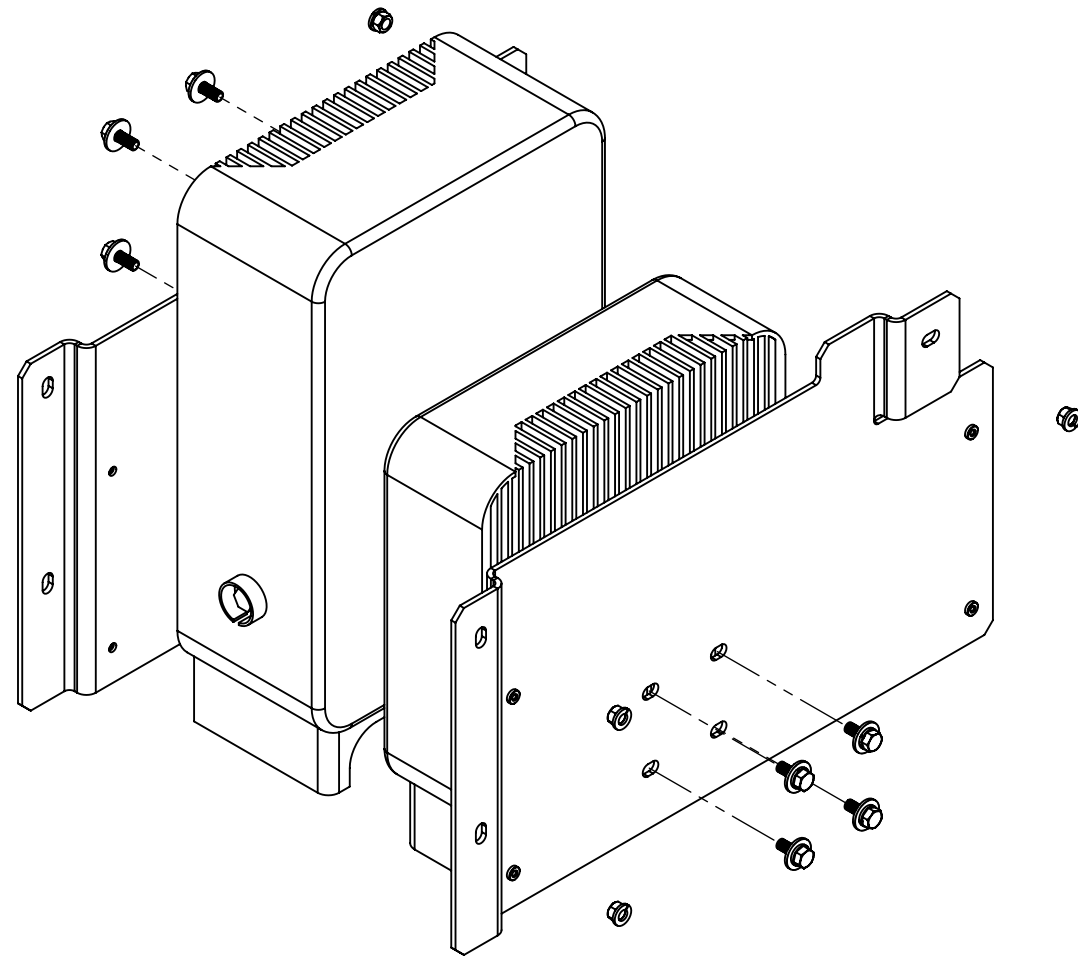

D

C

B

A

LAA/CBRS RADIO INSTALLATION

- 1) INSTALL THE LAA/CBRS RADIOS TO THE BRACKETS USING 4 SETS OF M6 HW, PROVIDED IN THE HW KIT
- 2) INSTALL EACH SUB-ASSEMBLY TO THE ENCLOSURE USING 3 SETS OF 1/4" NUTS AND LOCK WASHERS

Confidential

				
TITLE 760237600S1 INSTALL				
SIZE C	SCALE 1:4	DOCUMENT NO. 760237600S1 INSTALL		
 		DRAWING		
		VERSION 01	STATUS RE	REVISION B
				SHEET 4 OF 4